

IspVM quicky **START**

ICPDAS CO.,LTD




Prepare the Firmware download cable




Firmware download-step 1

Download cable connected to a PC computer

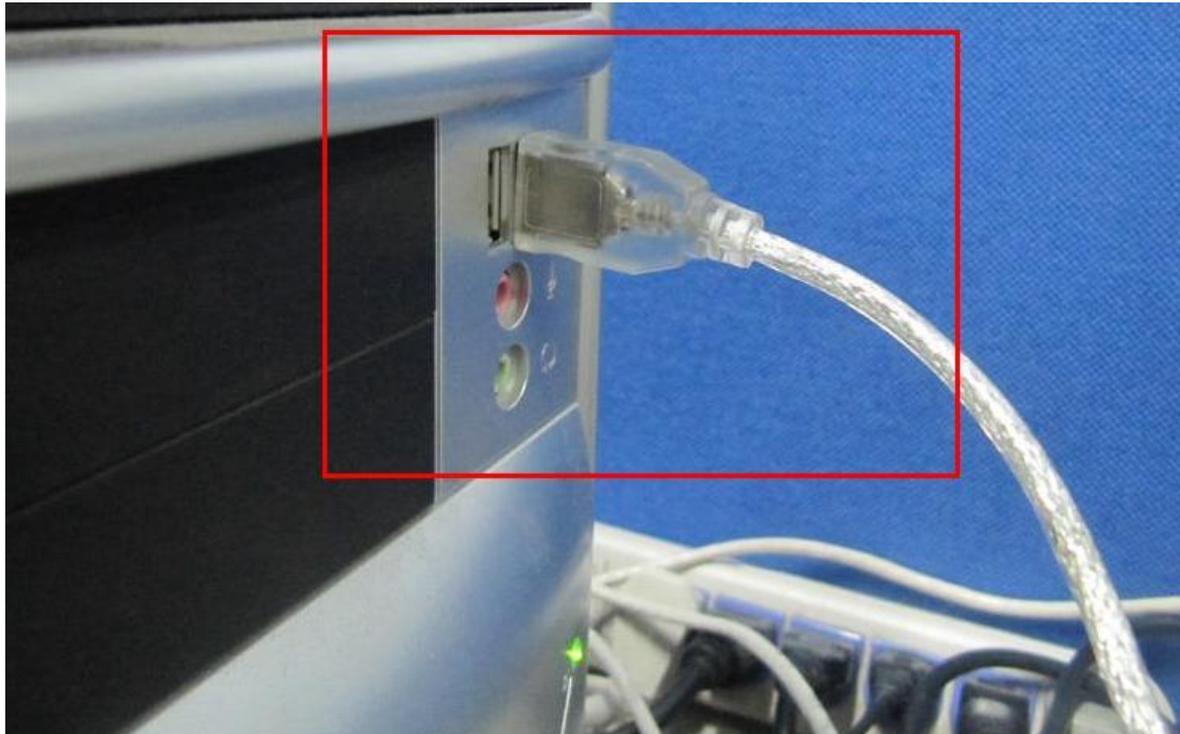

Firmware download-step 2

Plug the USB Adapter into the PISO-813 board

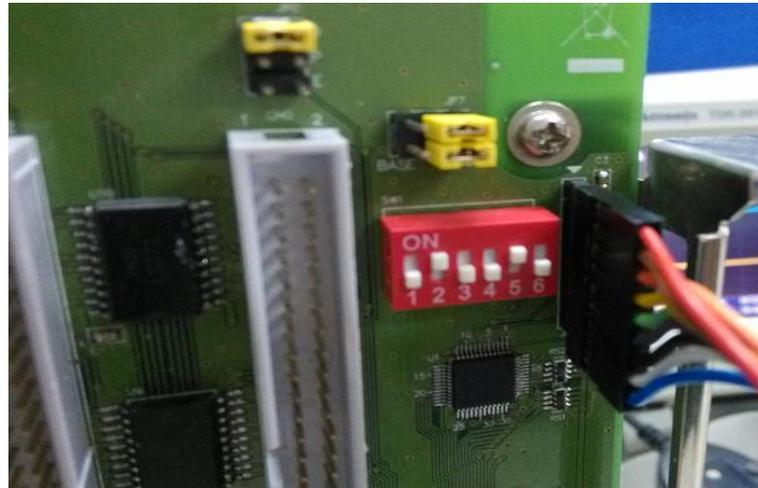

P.S. Red Line toward to“1”


Install

Install "ispvmSystemV 17.1"




Setup Wizard

Select "Next"

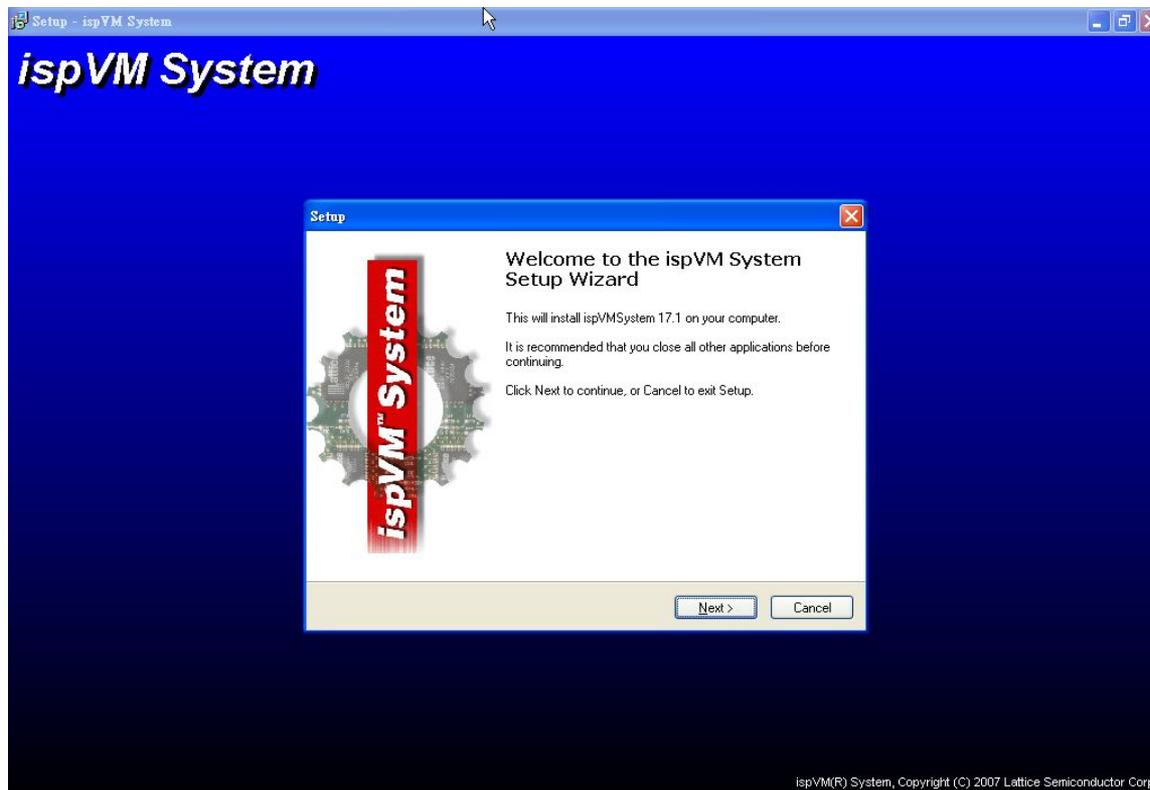


Setup Wizard

Select "Next"

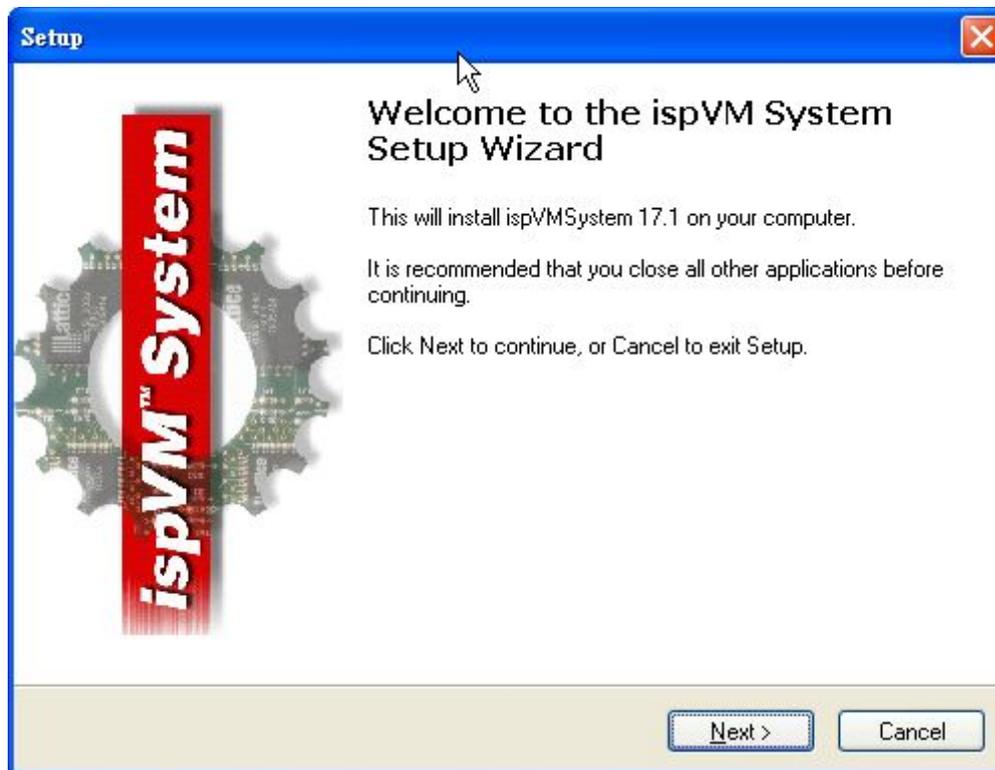


License Agreement

Select "I accept the agreement", and then Select "Next"

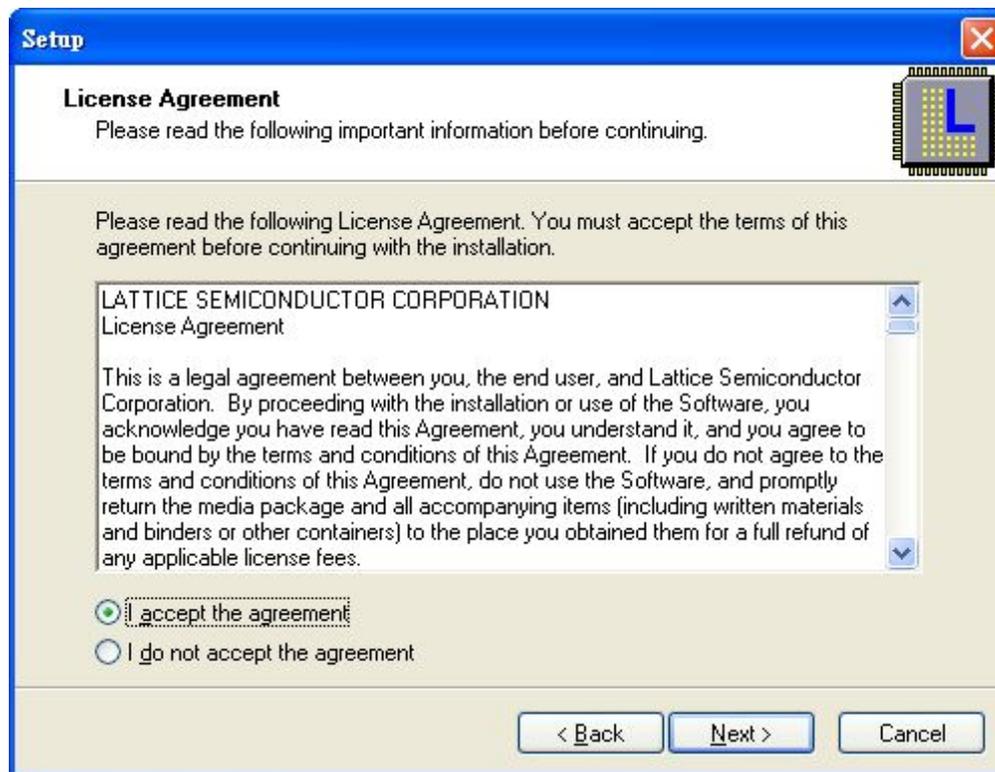

Select folder

Select "Next"

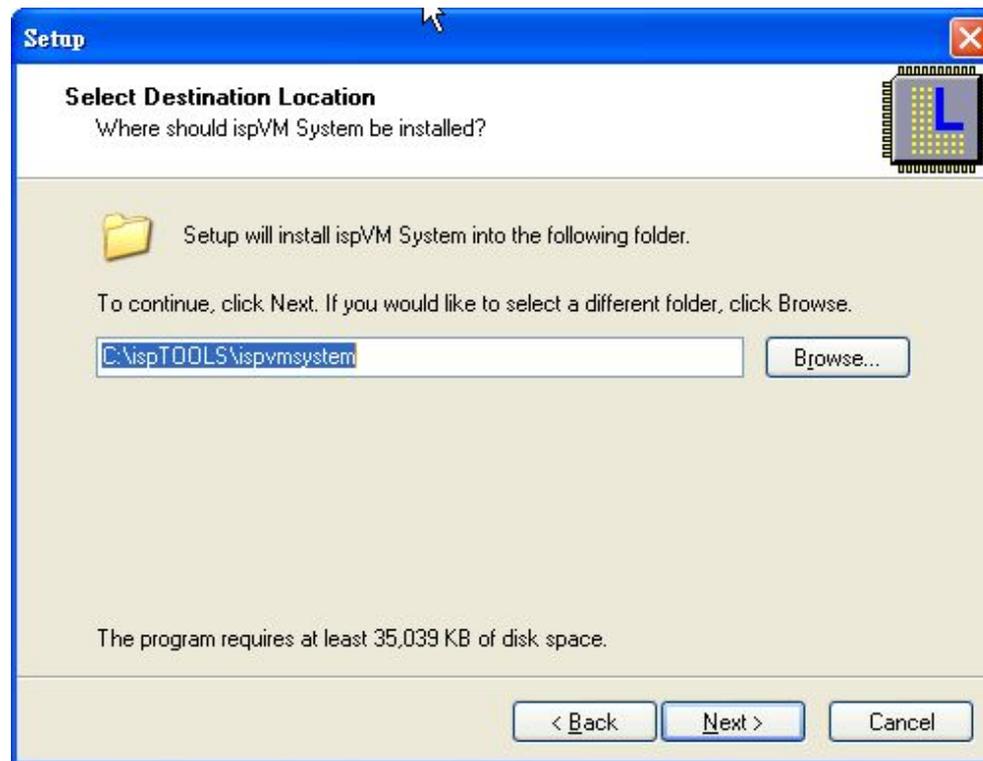


Creat folder

Select "Y"




Select components

Select "Next"

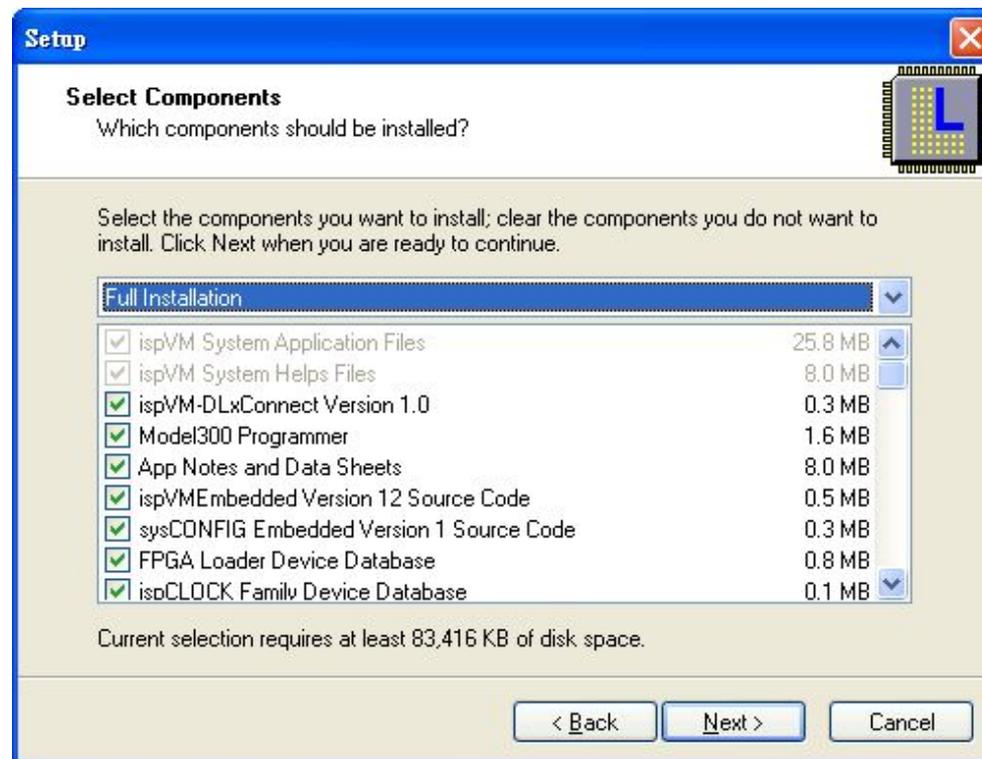


Menu folder

Select "Next"

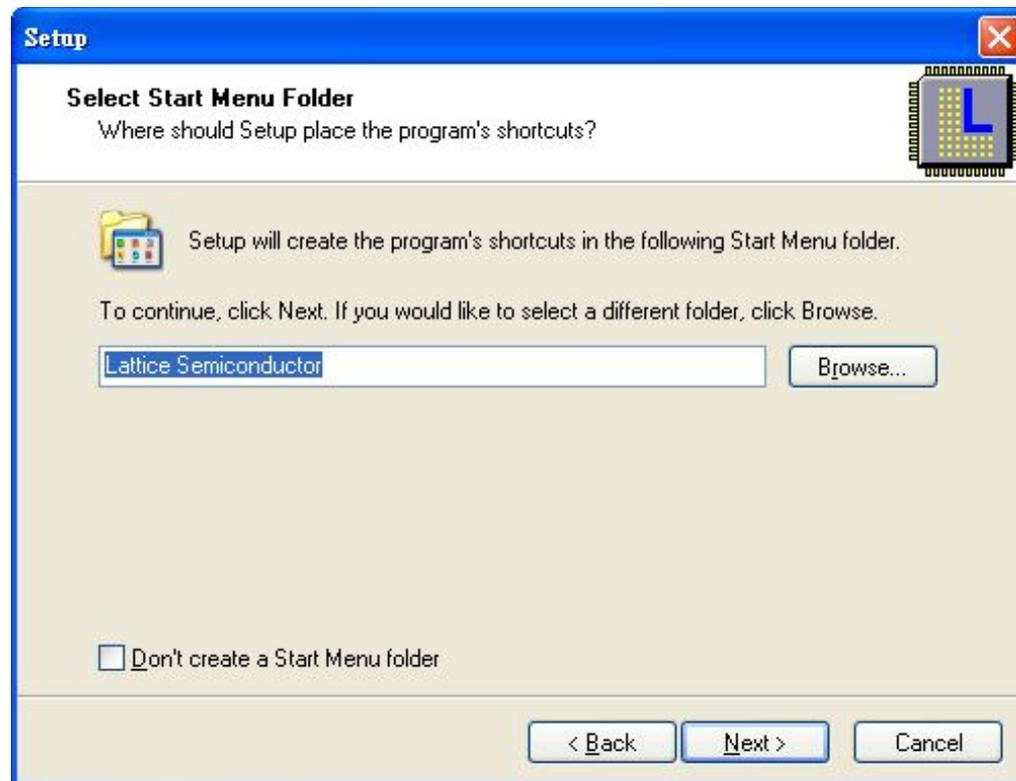

Create icon

Select "Create a desktop icon", and then Select "Next"

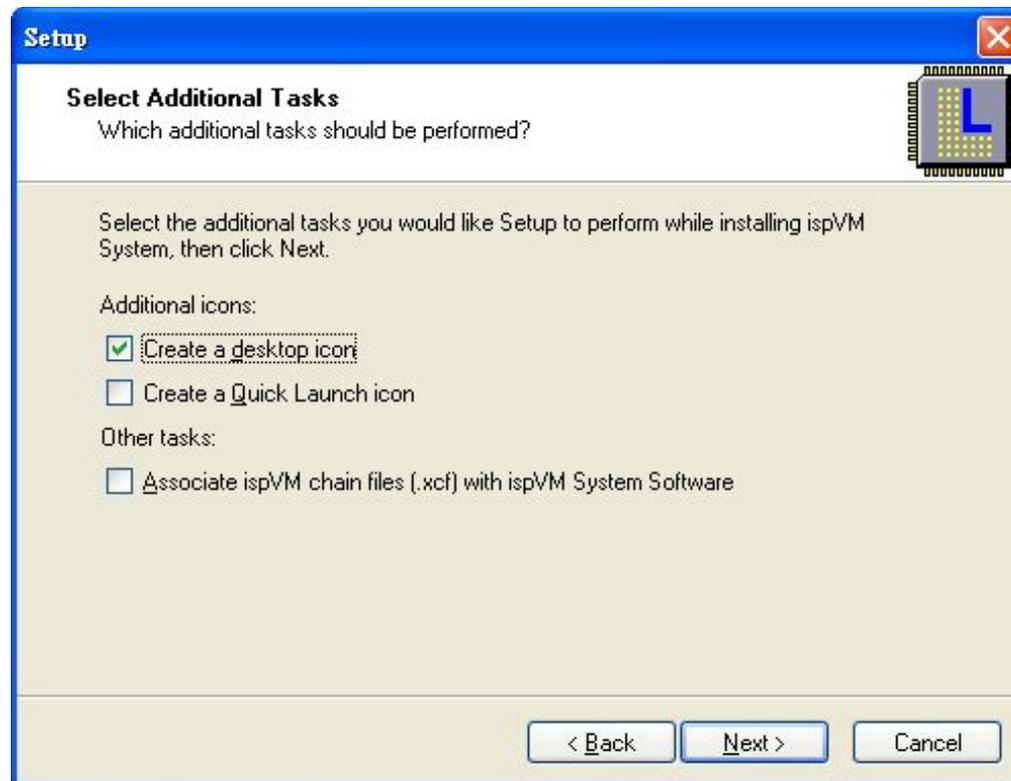


Install Driver

Select "Y"




Install USB driver

Select "LSC Win98/2000/XP USB Driver", and then select "Install"

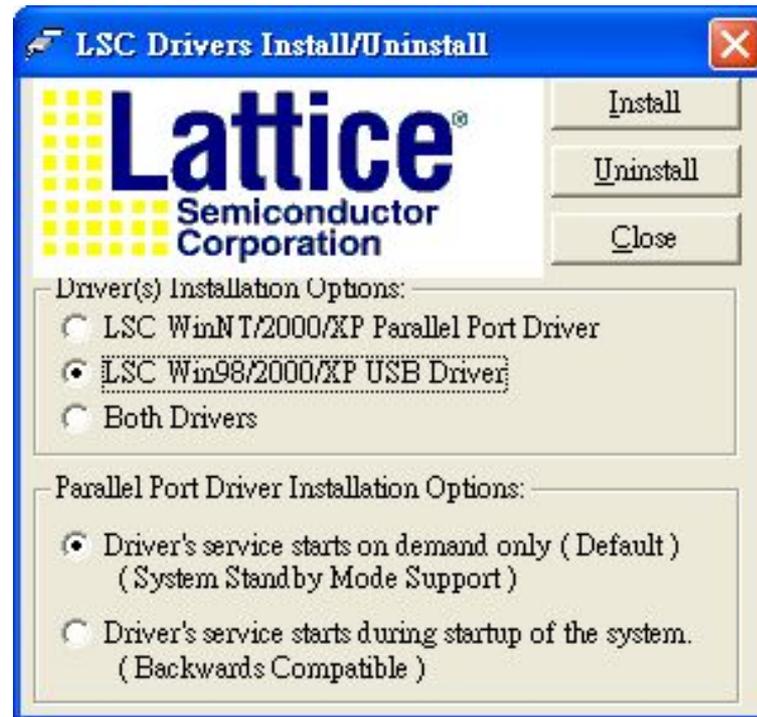

Install download program

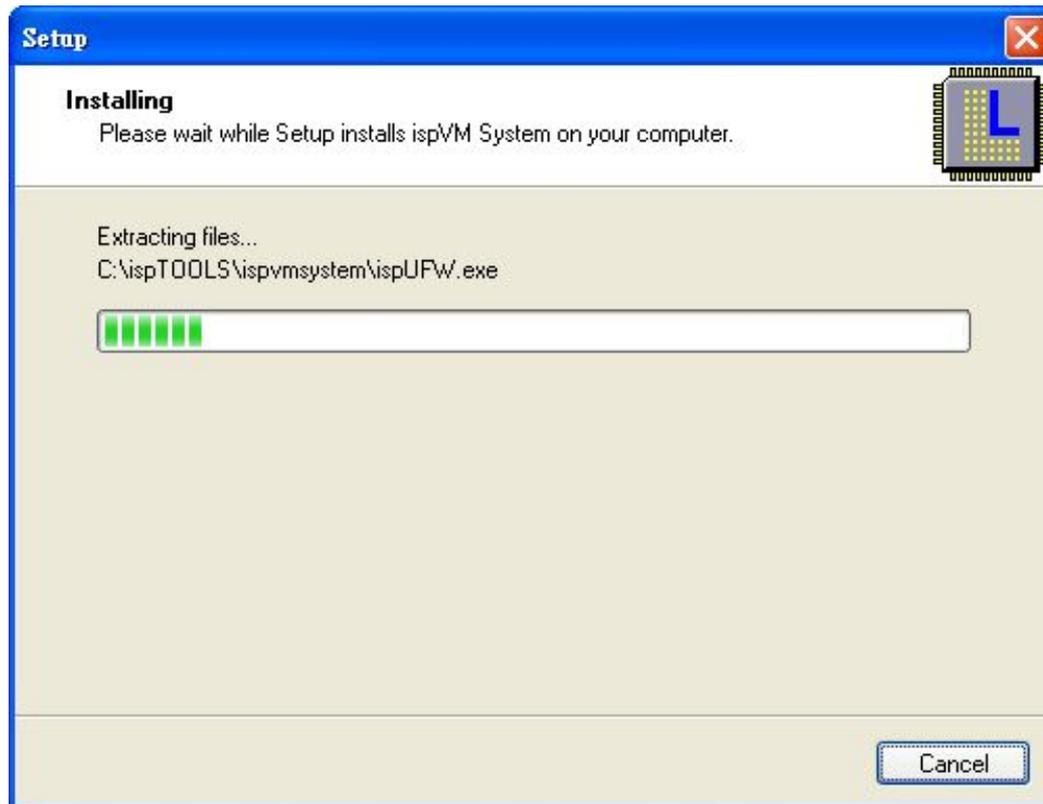


Completed

Select "確定"



Restart the computer

Select "Yes, restart the computer now", and then Select "Finish"

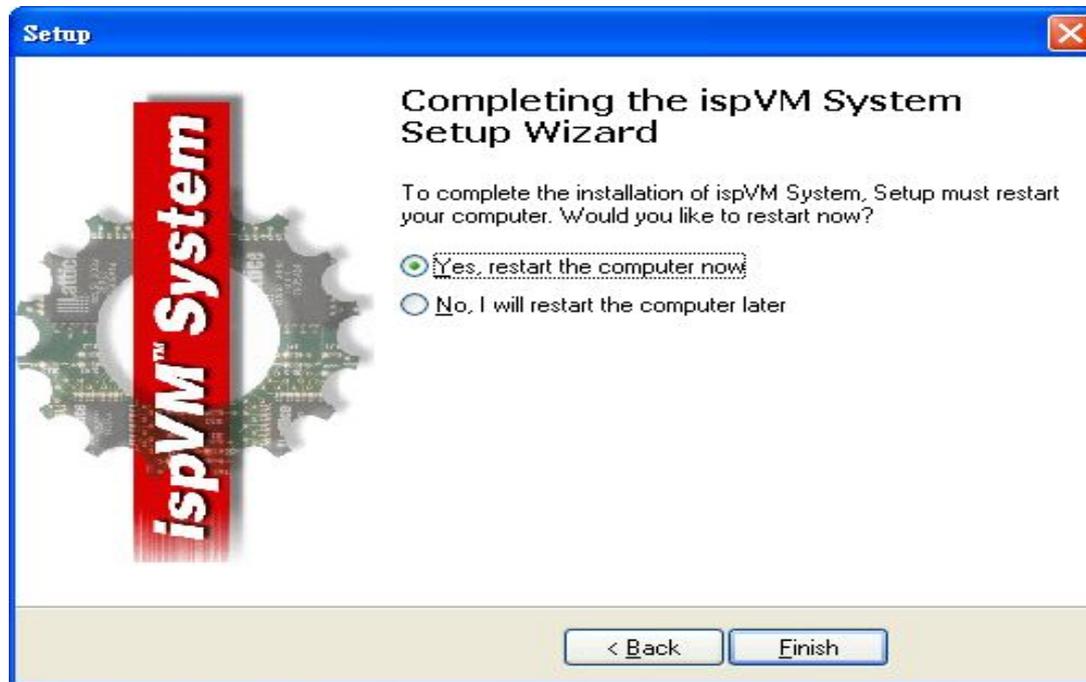

Desktop Icon

Please select "ispVM System" to start download the Firmware



Setting

1. Scan

3. GO

2. Click → Browse → search

download file → OK

(piso813 je d)

Index	Device List	FileName/IR-Length	Operation	Status
1	LC4064V(B)-32IO		Bypass	N/A
2	LC4064V(B)-32IO	C:\Documents and Settings\RD2_Jey...	Erase, Program, Verify	N/A
3	LC4064V(B)-32IO	C:\Documents and Settings\RD2_Jey...	Erase, Program, Verify	N/A
4	LC4064V(B)-32IO	C:\Documents and Settings\RD2_Jey...	Erase, Program, Verify	N/A