


# Software Upgrade Guide

## ◆ Notice


1. Check correctly the Full model name of TV Set.  
Ex) 47LX9500-UA : The Full model name must include “-UA”.
2. Check the application Full model name and purpose of software upgrade after click the software name on the website.
3. Do not unplug the TV power cord during software upgrading.

## 1. Method to verify the Full model name of TV Set .

Method①. Check label of TV Set (Side or Rear).

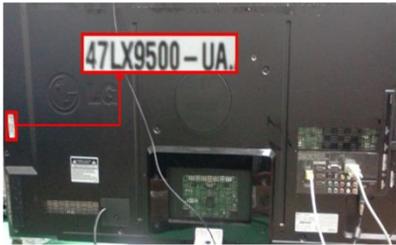

or

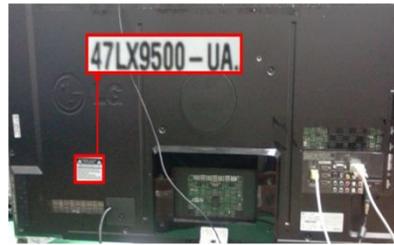


Method②. Check the Menu.


- 1) Press [MENU] key of remote control.
- 2) Press  (Red) key of remote control.  
 (Red) key is “Customer Support”.



- 3) Select the “Product/ Service Info.”

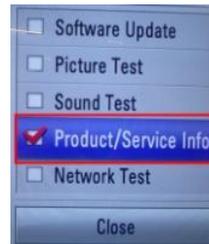

- 4) Check the “Model/Type”

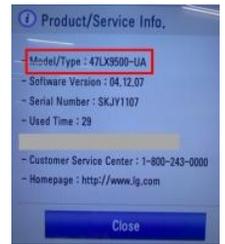


Method③. Check the SETUP.


- 1) Press [Home] key of remote control.
- 2) Select the “SETUP”.



- 3) Move to the ”SUPPORT”

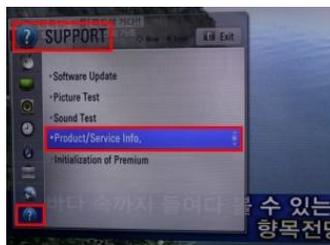

- 5) Check the “Model/Type”

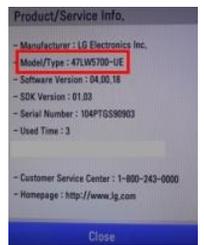

## 2. Method to verify the Full model name of TV Set and purpose of software upgrade on the website.


- ① Click the “Drivers & Software”.
- ② Click the Software name.

- ③ Check the Full model name (Ex. 47LX9500-UA) and purpose of Software upgrade.



# 1 Searching the software.


① Select your country after connecting to [www.lg.com](http://www.lg.com).

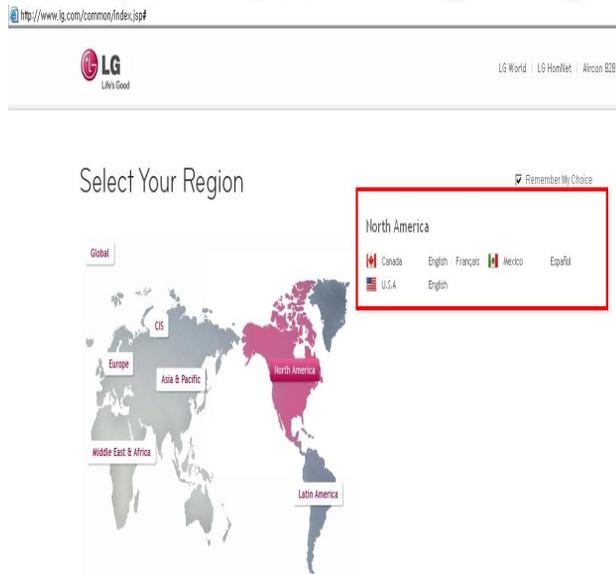


② Move to the "Support".



③ Fill in the your Model name.  
(Ex. 47LX9500(Fill Model name except "-UA").)  
④ Click the "Continue".

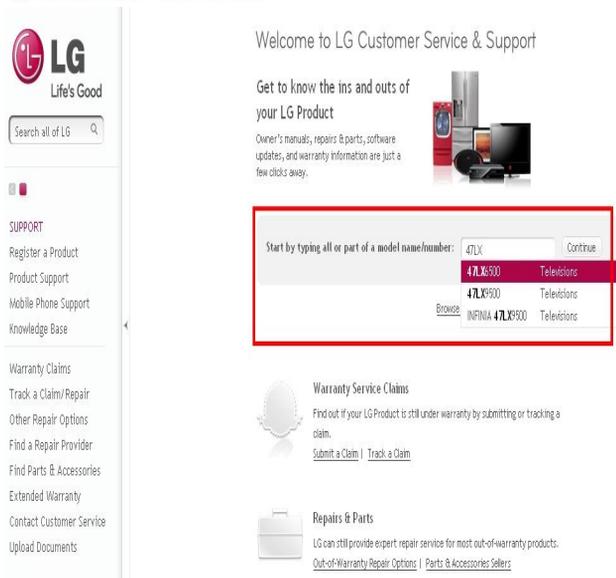


⑤ Click the Model name.

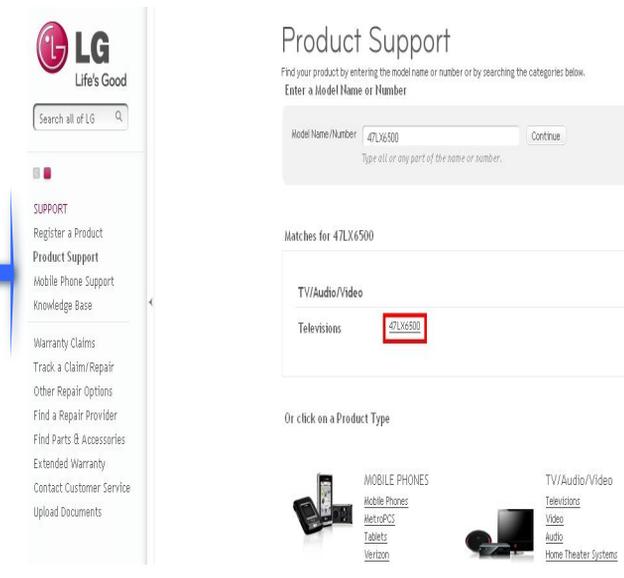


⑥ Click the "Drivers & Software".

⑦ Click the Software name.

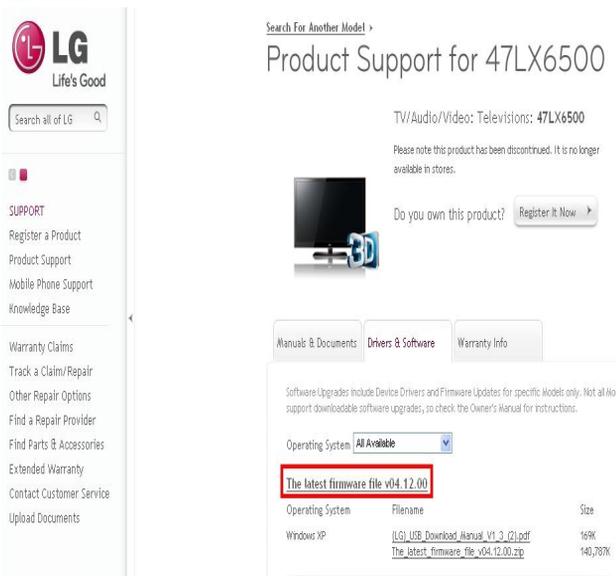


⑧ Check the Full model name (Ex. 47LX9500-UA) and purpose of software upgrade.

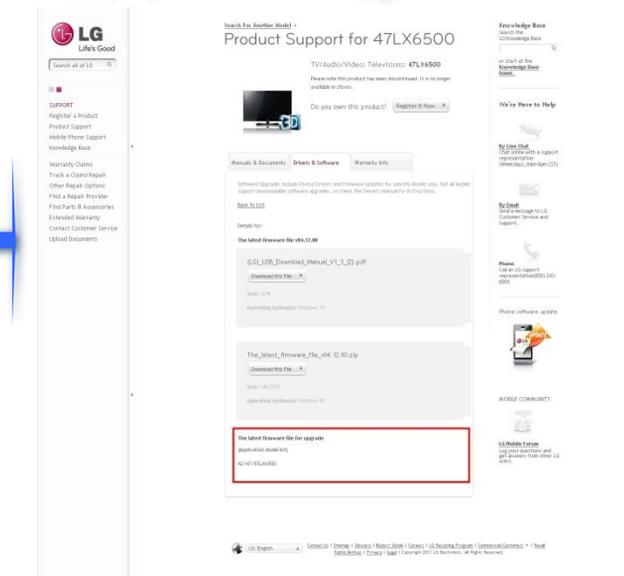

## 2 Downloading the software file to the USB Memory device.

① Click the “Download this File” on the website to save it to the

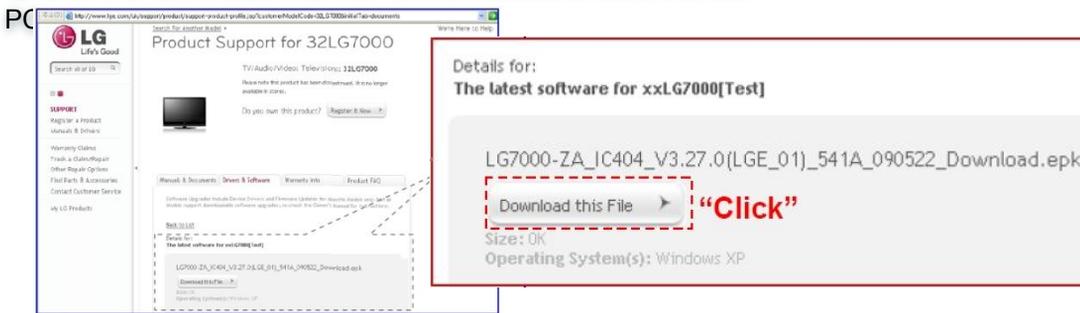


② Unzip the software file.

③ Insert the USB memory device into USB Port of the


④ Make a folder in USB Memory device. **Folder name must be “LG\_DTV”.**

⑤ Save the software file to “LG\_DTV” folder of USB Memory

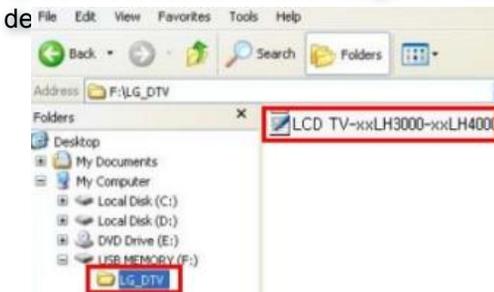

## 3 Insert the USB memory device into USB port of the TV.

• Position of USB port : Side or Rear

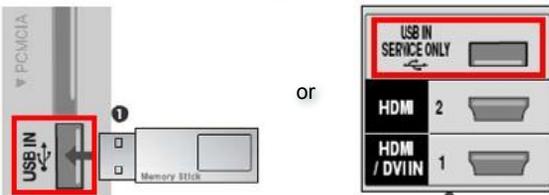

## 4 Running the software Upgrade.

① If below message appear on TV, please select “Start”.



※ If there are the same or lower software version in the USB memory device than software version in your TV, doesn't appear message.

※ A few USB memory device may not be compatible with the TV, in that case you use another USB device.

② If software upgrade execute, below message will appear on



1) Copying the new version software file from USB Memory device to the TV system memory.

※ **Don't remove the USB Memory device while this message is displayed.**

**Do not unplug the TV power cord while this message is displayed.**

2) Running the software upgrade.

※ **Do not unplug the TV power cord while this message is displayed.**

3) If the upgrade is completed, this message is displayed.

And the TV will restart automatically in 5 seconds.