

Service Tool

- ACD3 controller -

Service Tool
MCS Mode

Module	7 DISP STATE	8 ENT CALL	9 TEST
Function	4 DISP IN	5 SEL OUT	6
Set	1 ON	2 UP	3 DOWN
Shi ft	0 OFF	GO ON GO BACK	CLEAR ENTER

Service Tool


MCS Mode

Module	7 DISP STATE	8 ENT CALL	9 TEST
Function	4 DISP IN	5 SEL OUT	6
Set	1 ON	2 UP	3 DOWN
Shift	0 OFF	GO ON GO BACK	CLE AR ENTER


Key function

Module	Move to initial mode
Function	Move to higher menu
Set	Move to main menu from sub menu
Shift	Press to select menu in blue
GO ON GO BACK	Go on next display (GO ON) Go back previous display (Shift +GO ON)
CLE AR ENTER	Clear: Delete last contents Enter: To set input display (Shift+CLEAR)

★ GECB (Control) SVT

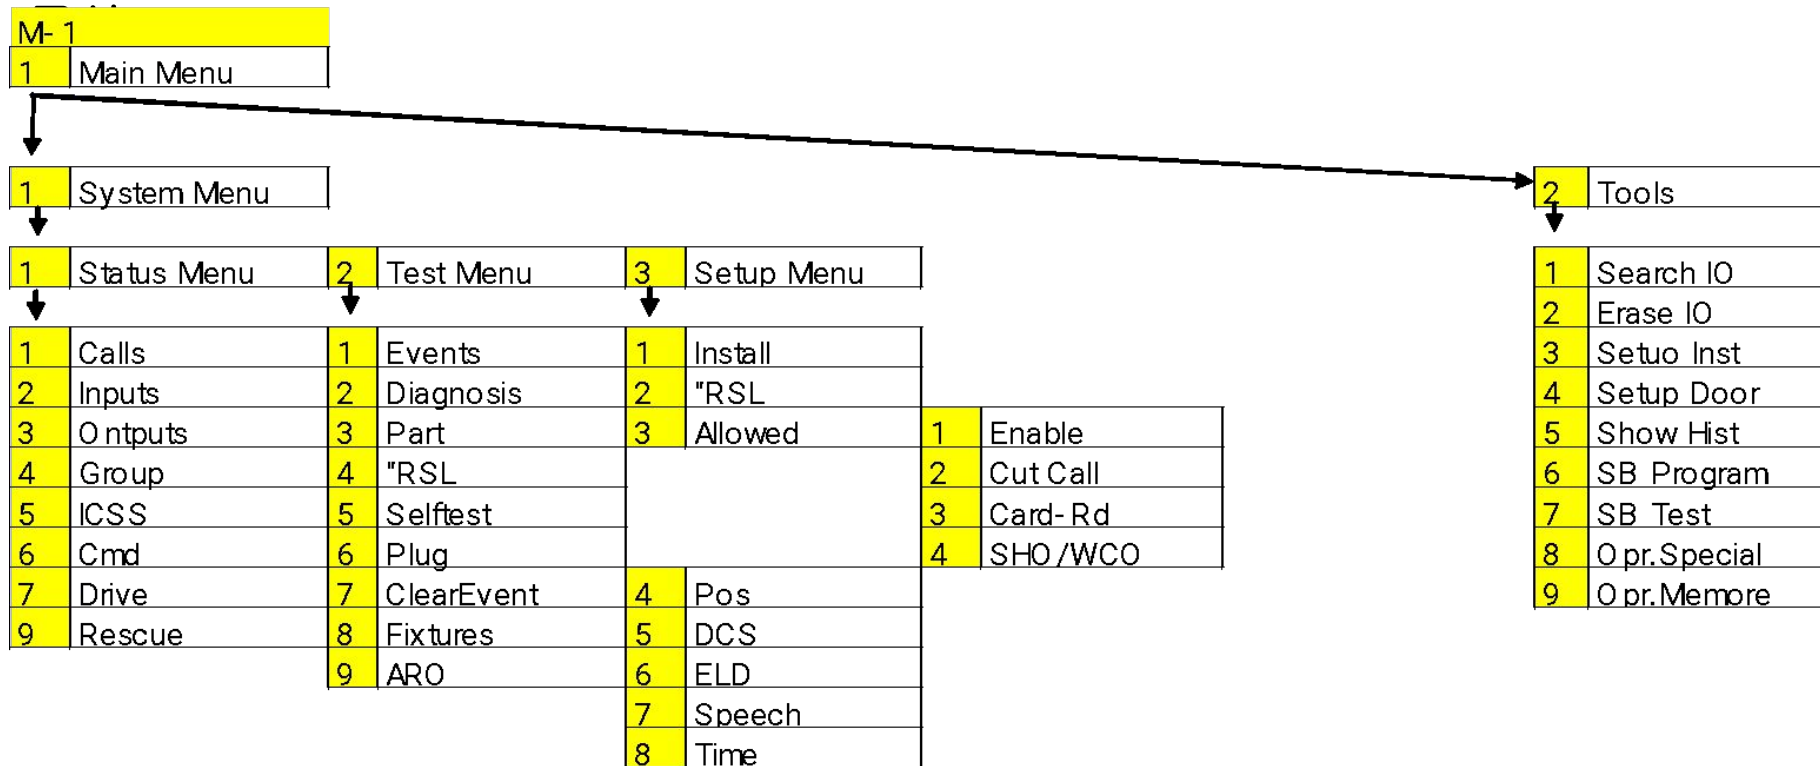

★ GDCB (Drive) SVT

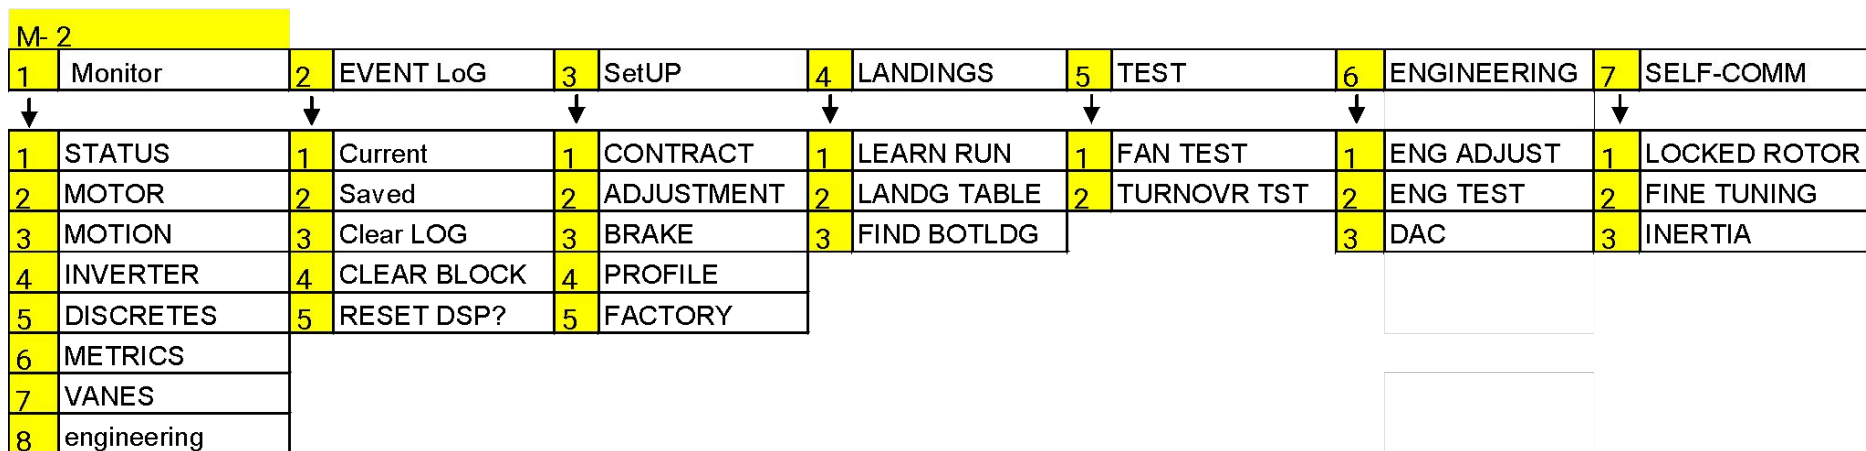

Frequent used menu

Process	Key	Function	Remarks
Slow speed	M-2-3-1	Contract parameter check (Drive)	
	M-2-3-5	Profile check (Speed)	
	M-2-3-2	Change parameter (Drive)	
High Speed preparation	M-1-1-1-1	Monitoring operation condition	
	M-2-1-1	Monitoring drive condition	
High speed	M-1-1-3-1-1	Contract parameter check (Control)	
	M-1-1-3-1-6	PRS type setting & re-leveling setting	
	M-2-3-1	PRS sensor type setting	
	M-2-4-1	Learn run (Floor height measurement)	
	M-2-4-3	Go to bottom floor	
	M-1-1-3-5	DCS (Door Check Sequence)	
Adjustment (Connect SVT to COP)	M-3	# of PTM & car load setting	
	M-4	Load (0%,100%) setting	
	M-2	Load event check	
UCM	M-1-1-9-3	UCM release (Korean only)	
	M-1-1-9-4	UCM condition check (Korean only)	
Block clearance	M-2-2-4	For resetting GDCB	
GECD Event	M-1-1-2-1	Monitoring	
	M-1-1-2-7	Clearing	
GDCB Event	M-2-1	Monitoring	
	M-2-3	Clearing	